


COOKTOP PARTS

For Models: RF367LXMW0, RF367LXMQ0, RF367LXMT0, RF367LXMB0, RF367LXMV0

(White) (Designer White)(Designer Biscuit) (Black) (Biscuit)



30" ELECTRIC FREESTANDING
SELF CLEAN RANGE

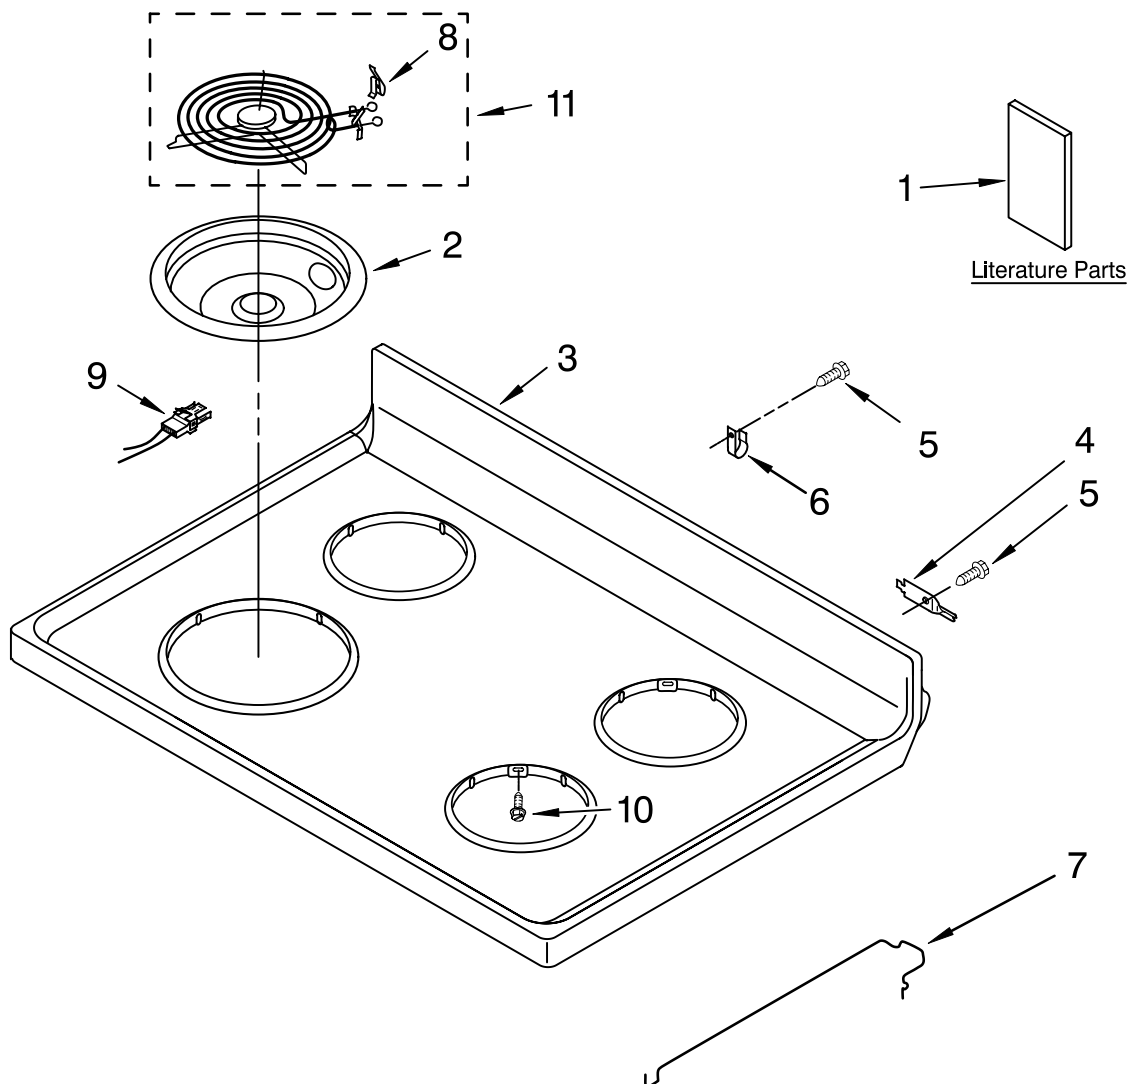

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT9756384	Guide, Use & Care
	LIT4454079	Tech Sheet
	LIT9757983	Instructions, Installation
	LIT8523048	Instruct, Install (Template)
	LIT3191638	Safer Cooking Tips


Illus. No.	Part No.	DESCRIPTION
2		Bowl, Drip
	3196202	6" Black
	3196203	8" Black
	3196206	6" Gray
	3196207	8" Gray
	8522881	6" Espresso
	8522882	8" Espresso
3		Cooktop
	3186231	White
	8272527	Biscuit
	3186233	Black

Illus. No.	Part No.	DESCRIPTION
4	3195060	Hinge, Cooktop (2)
5	3196178	Screw
6	308605	Strain Relief
7	3195812	Rod, Support (2)
8	3195917	Clip, Spring
9	814399	Receptacle, Elmnt
10	3196154	Screw
11		Element, Surface
	8053266	6" (2)
	8053268	8" (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RF367LXMW0, RF367LXMQ0, RF367LXMT0, RF367LXMB0, RF367LXMV0
(White) (Designer White)(Designer Biscuit) (Black) (Biscuit)

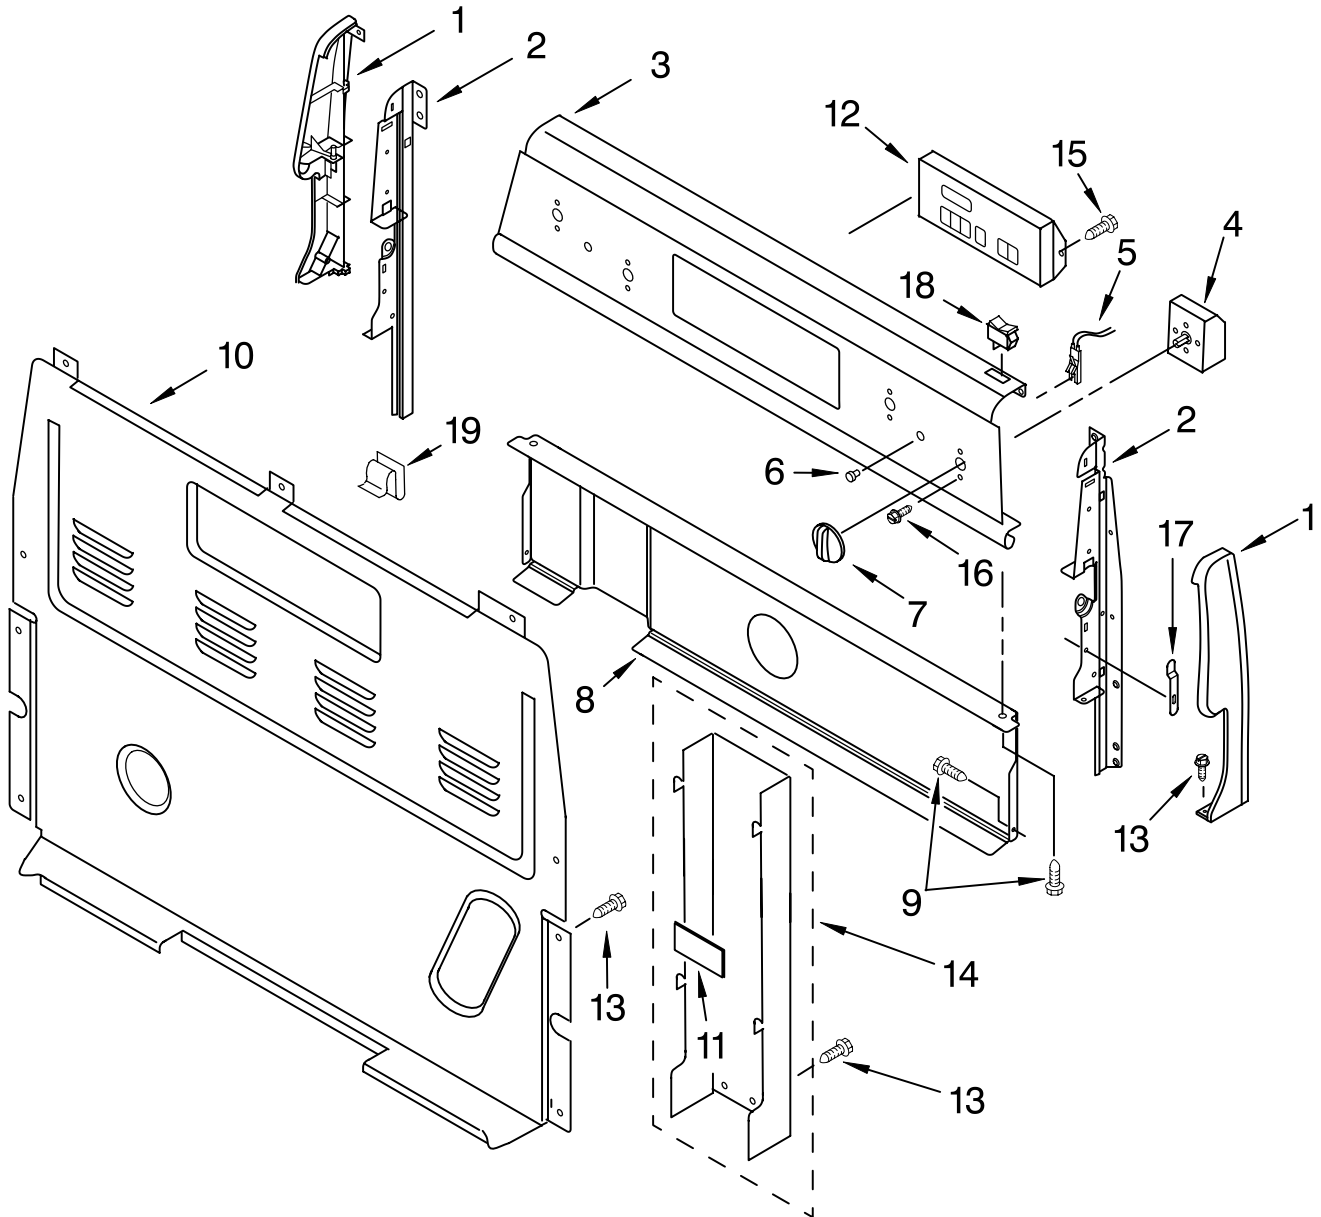

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3186188	Black Left Hand	4	3148954	Left Front	11	9757309	Insulator, Card
	3186189	Black Right Hand		3148952	Left Rear	12	6610398	Black
	3186190	White Left Hand		3148954	Right Rear		6610397	White
	3186191	White Right Hand		3148952	Right Front		6610399	Biscuit
	8272507	Biscuit Left Hand	5	8523265	Light, Indicator	13	3196178	Screw
	8272508	Biscuit Right Hand	6	3196068	Lens, Light	14	9757965	Cover, Box
2		Support, Endcap	7		Knob, Infinite (4)	15	3196169	Screw
	8523408	Left Hand		8522566	Black	16	3400882	Screw
	8523409	Right Hand		8522565	White	17	3196200	Clip, Spring (2)
3		Panel, Backguard		8522567	Biscuit	18		Switch, Rocker
	3186171	Black	8	8053912	Shield, Heat		3148564	Black
	3186173	White	9	4449746	Screw		3149360	White
	8273510	Biscuit	10	8272473	Cover, Upper		8273501	Biscuit
						19	8273564	Clip


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF367LXMW0, RF367LXMQ0, RF367LXMT0, RF367LXMB0, RF367LXMV0

(White) (Designer White)(Designer Biscuit) (Black)

(Biscuit)

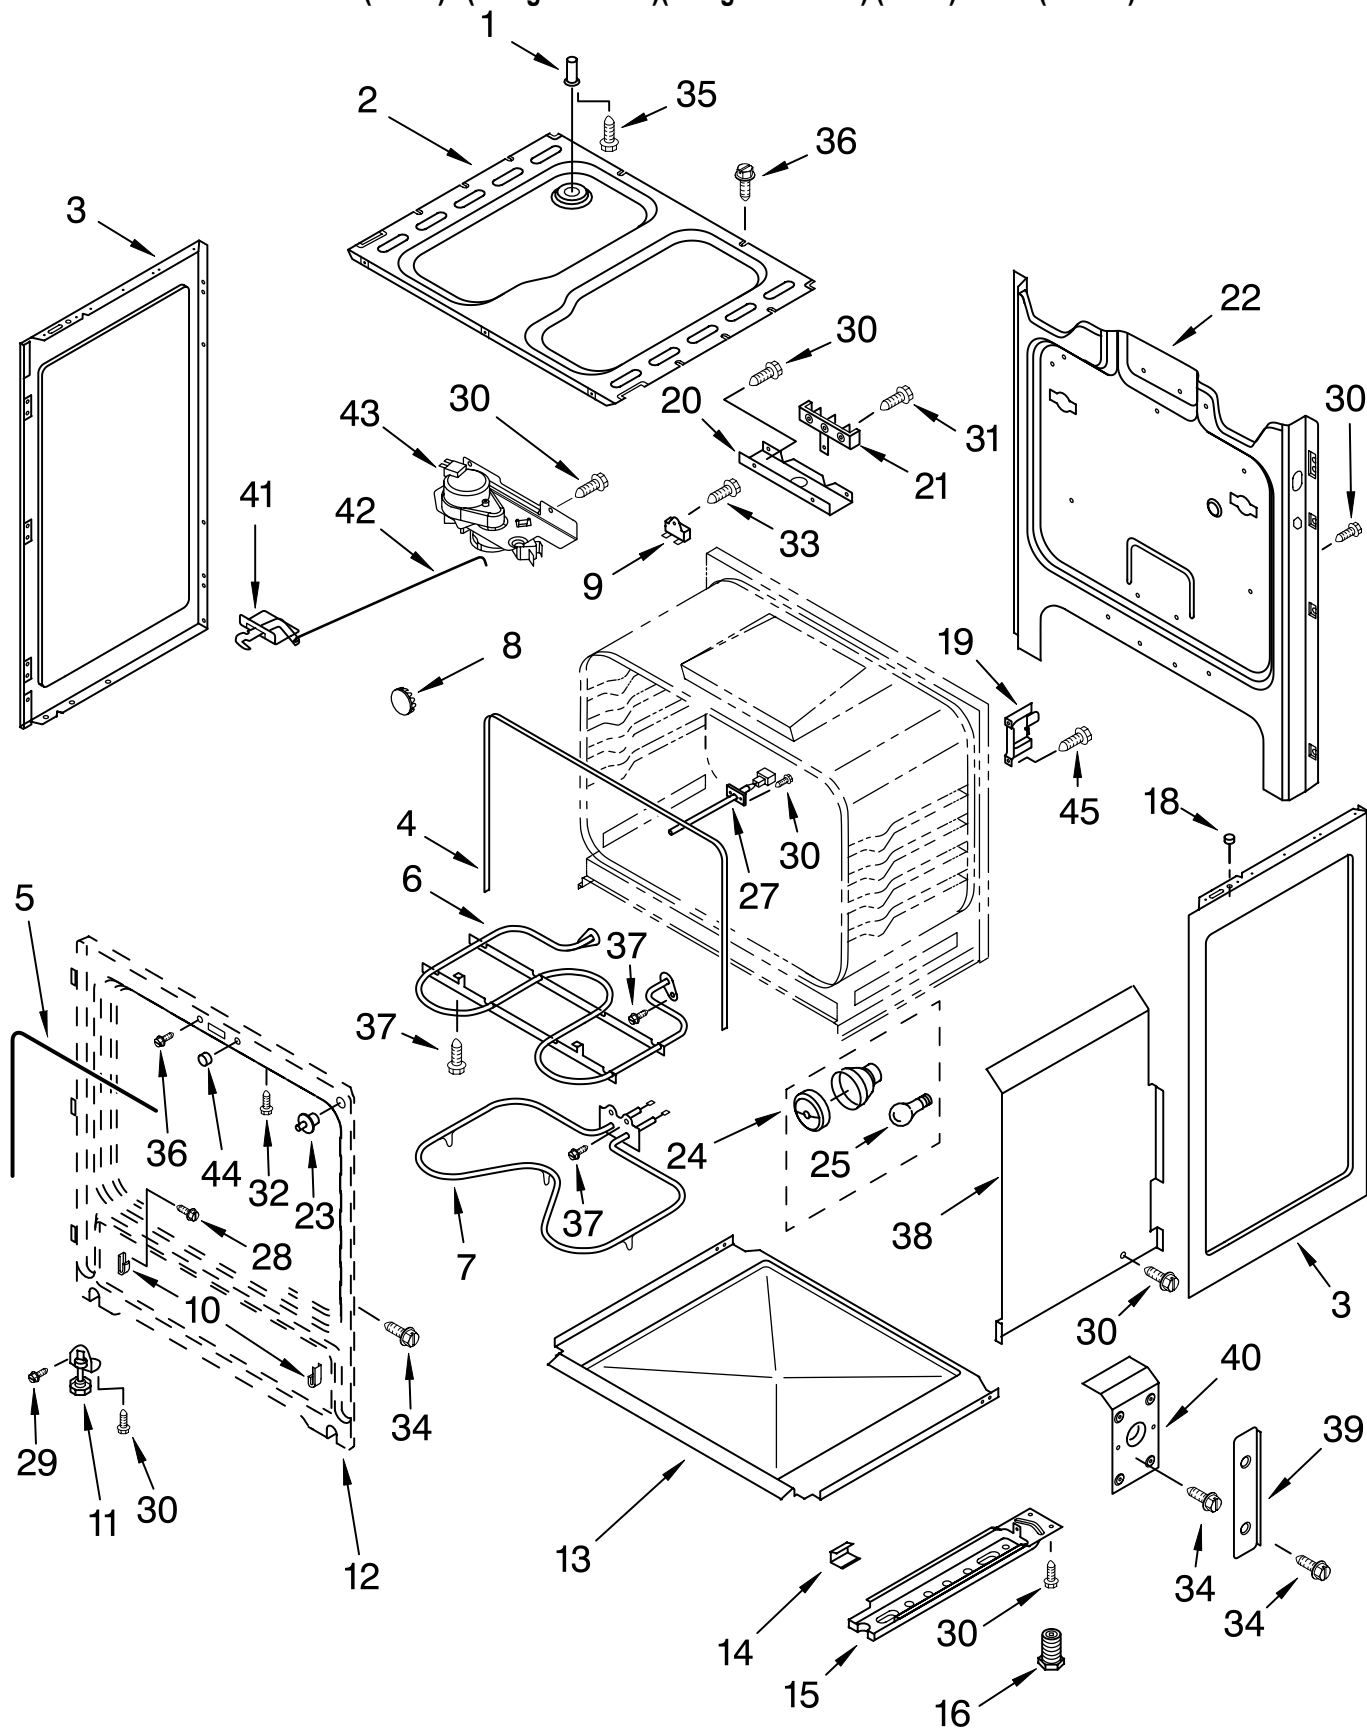

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF367LXMW0, RF367LXMQ0, RF367LXMT0, RF367LXMB0, RF367LXMV0
(White) (Designer White)(Designer Biscuit) (Black) (Biscuit)


Illus. No.	Part No.	DESCRIPTION
1	9755804	Vent Tube
2	3186144	Box, Burner
3		Panel, Side (2)
	8053830	White-Textured
	8272519	Biscuit-Textured
	8053832	Black
4	3195737	Seal, Oven Flange
5	8522416	Seal, Oven Door
6	8053712	Element, Broil
7	8053713	Element, Bake
8	3196439	Button, Plug
9	3196548	Fuse, Thermal
10	3195546	Glide, Drawer Frnt
11	3196037	Foot, Front (2)
12		Frame, Front
		Not Serviced
13	8054068	Tray, Insulation
14	3196576	Clip, Panel (6)
15	8053335	Rail, Base (2)
16	312701	Foot, Rear (2)
18	3195809	Bumper, Side (2)
19	3186116	Support, Oven (2)
20	3186034	Bracket, Service
21	9757136	Block, Terminal
	112432	Nut (3)
22	8274034	Back, Main
23	3195993	Switch, Door
24	3196701	Light Socket Assy
25	311255	Bulb, Oven Light
27	8273902	Sensor, Oven
28	3196165	Screw
29	3196179	Screw
30	3196178	Screw
31	3400016	Screw
32	3196176	Screw
33	3196172	Screw
34	3196177	Screw
35	3196567	Screw
36	3196168	Screw
37	3196174	Screw
38	8523803	Retainer, Side (2)
39	3196091	Shield, Outer (2)
40	3196092	Shield, Inner (2)
41	3196119	Latch, Door
42	3196961	Rod, Latch
43	3196958	Latch Asy, Rear
44	3196392	Spacer, Door
45	3196169	Screw

INSULATION

8272616 Insulation, Wrap
8272612 Insulation, Back

DRAWER & BROILER PARTS

For Models: RF367LXMW0, RF367LXMQ0, RF367LXMT0, RF367LXMB0, RF367LXMV0
(White) (Designer White)(Designer Biscuit) (Black) (Biscuit)

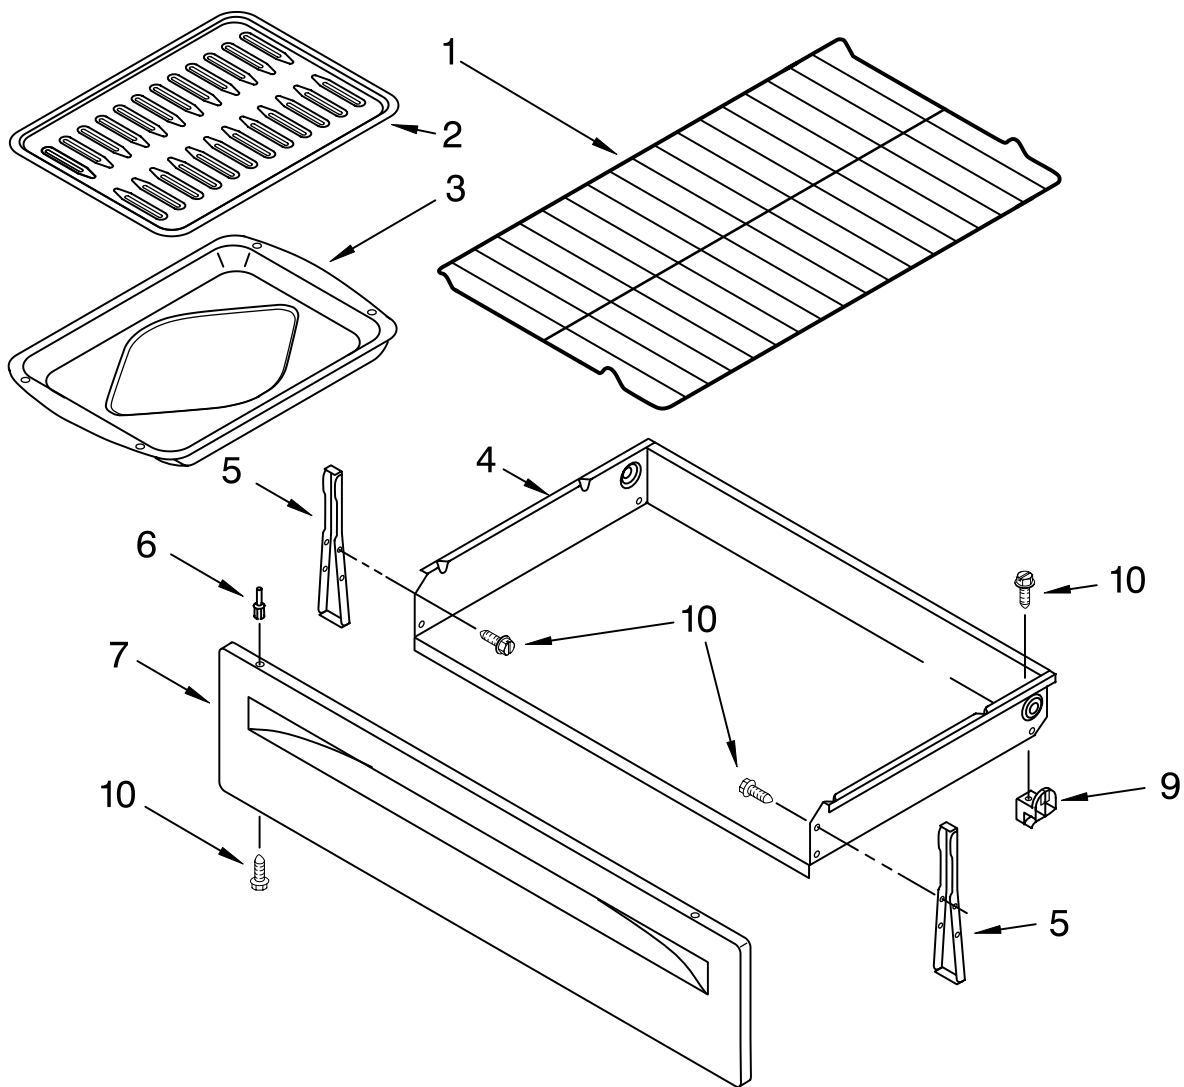


Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
2	3195996	Grill, Broiler
3	3196076	Pan, Broiler
4	8272605	Drawer, Storage
5	3196816	Bracket, Drawer(2)
6		Rivet, Push (2)
	3196814	White
7		Panel, Drawer Frnt
	8053339	White
	8272501	Biscuit
	8053341	Black
9	8053334	Glide, Drawer (2)
10	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: RF367LXMW0, RF367LXMQ0, RF367LXMT0, RF367LXMB0, RF367LXMV0

(White) (Designer White)(Designer Biscuit) (Black) (Biscuit)

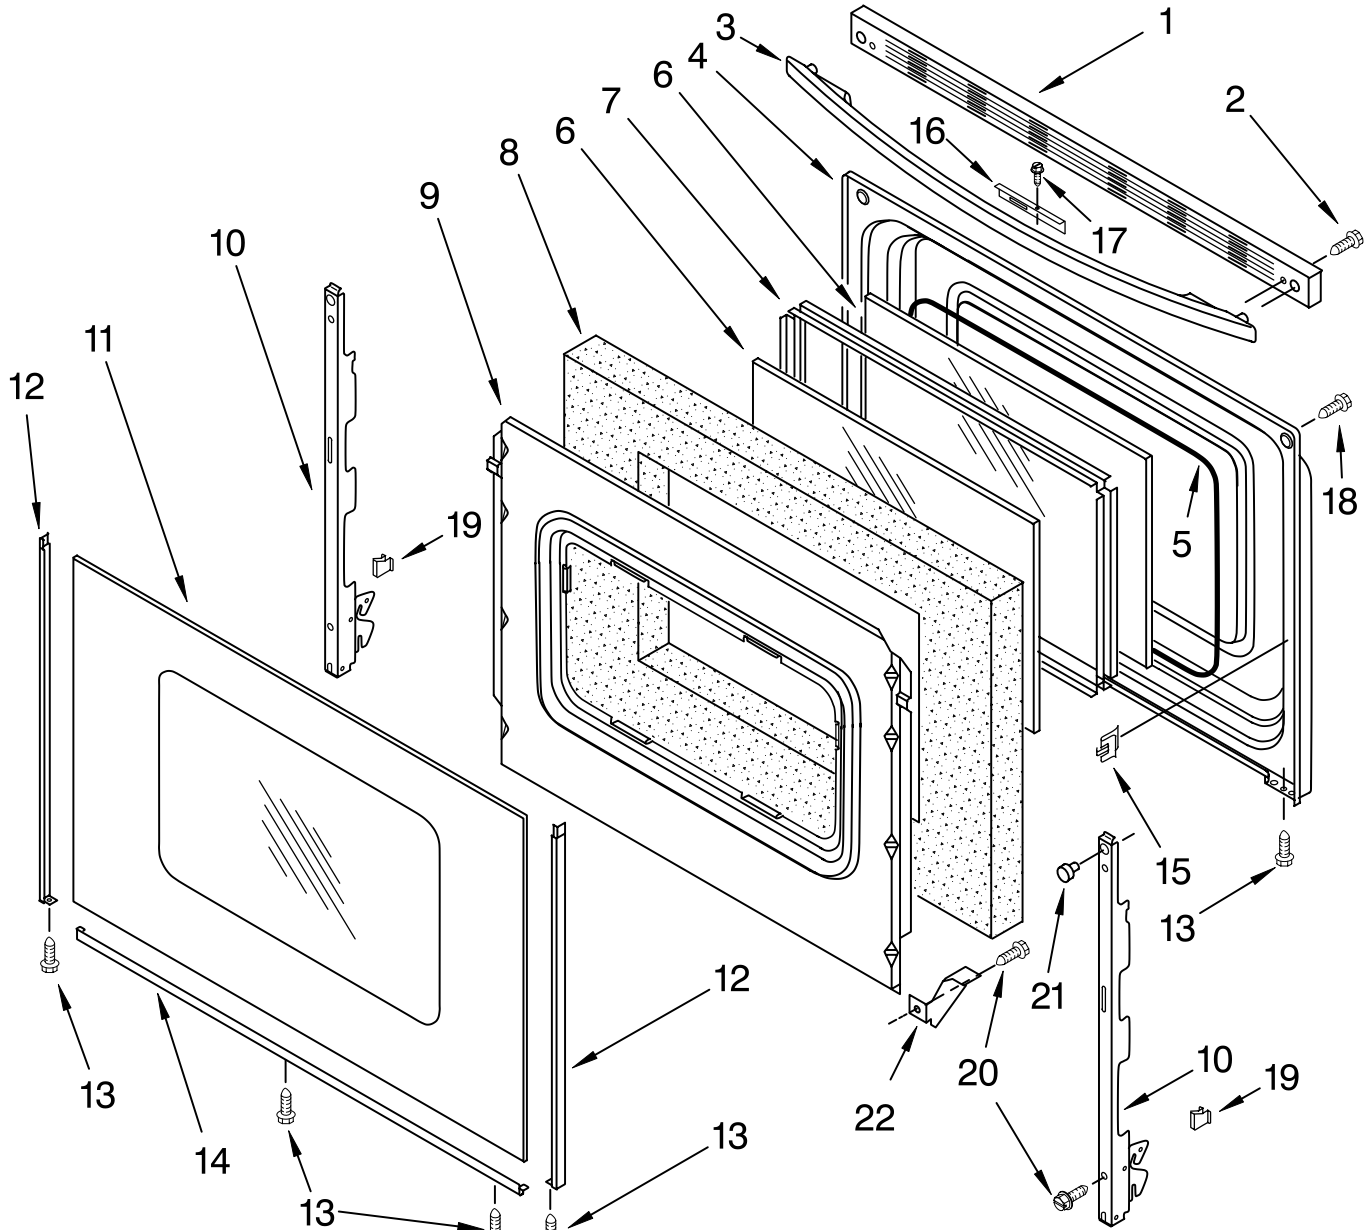

Illus. No.	Part No.	DESCRIPTION
1	3196819	Trim, Top
	8522433	Black
	8522434	White
2	3196164	Screw
3	3195922	Handle, Door
	8522444	Black
	8522445	White
4	3186292	Liner, Door
5	8522414	Seal, Window
6	8053948	Glass, Inner (2)
7	3186289	Frame, Glass

Illus. No.	Part No.	DESCRIPTION
8	8272618	Insulation, Door
9	3186297	Retainer, Insul.
10	8053807	Hinge, Door (2)
11	8053478	Glass, Outer
	8053480	Black
	8053480	White
	8272498	Biscuit
12	8523171	Trim, Side
	8523165	Black Left Hand
	8523165	Black Right Hand
	8523166	White Left Hand
	8523172	White Right Hand
	8523167	Biscuit Left Hand
	8523173	Biscuit Right Hand

Illus. No.	Part No.	DESCRIPTION
13	3196160	Screw
14	8523177	Trim, Lower
	8523175	Black
	8523178	White
	8523178	Biscuit
15	3196025	Clip, Glass (4)
16	3195914	Latch, Bracket
17	3196168	Screw
18	3196161	Screw
19	3196925	Clip, Door Stop
20	3196165	Screw
21	3195809	Bumper, Door (2)
22	3196794	Bracket, Window(2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models: RF367LXMW0, RF367LXMQ0, RF367LXMT0, RF367LXMB0, RF367LXMV0

(White) (Designer White)(Designer Biscuit) (Black) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Following Parts Not Illustrated

SPLICING WIRES--25FT.

LENGTH

242828	Wire, Black	12 Ga. 150° c
8316781	Wire, Black	14 Ga. 150° c
242821	Wire, Blue	14 Ga. 150° c
242822	Wire, Brown	14 Ga. 150° c
242830	Wire, Brown	14 Ga. 200° c
242823	Wire, Green	14 Ga. 150° c
242824	Wire, Orange	14 Ga. 150° c
242829	Wire, Red	12 Ga. 150° c
242825	Wire, Red	14 Ga. 150° c
242831	Wire, Red	14 Ga. 200° c
242826	Wire, White	14 Ga. 150° c
242827	Wire, Yellow	14 Ga. 150° c
242832	Wire, Yellow	14 Ga. 200° c

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

72017	White
4392899	Biscuit
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit (Uncut)

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3184478	Cleaner, Glass

ANTI-TIP KIT

3176830	Anti-Tip Kit
---------	--------------

WIRING HARNESS PARTS

3196155	Harness, Wire (Cooktop)
4454072	Harness, Wire (Oven Light)
4454241	Harness, Wire (Sensor)
3196696	Clip, Harness
311227	Wire, Ground
3196154	Screw
8523718	Harness, Wire (Door Switch)
313660	Clip, Wire Ground

Miscellaneous

814381	Pin Kit-Dr Removal
--------	--------------------

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST